

ResetGodex/ResetZebra Instructions

© 2011 Fellowship Technologies a part of Active Network



# This Guide details how to setup and run the Rese Godex and ResetZebra scripts in Windows XP and Windows 7

#### Contents

Alignment Issues	3
Windows XP Printer Alignment	3
Windows 7 Printer Alignment	



# Alignment Issues

At times both the Zebra and Godex printers can have alignment issues where the labels may print extra blank labels or print across labels. This procedure will show how to setup and run the ResetGodex and the Reset Zebra scripts to correct this issue.

## Windows XP Printer Alignment

F1User	
Internet Explorer         Internet Explorer         Outlook Express         Image: Control of the explored exp	My Documents   My Recent Documents   My Pictures   My Music   My Computer   My Computer   Set Program Access and Defaults   Printers and Faxes   Pinters and Faxes   Help and Support   Search   Run
All <u>P</u> rograms 🌔	👌 Windows Security
	🖉 Log Off
🛃 start	

- 1. Click the Start button.
- 2. Click Printers and Faxes.





- 3. Right-click on the on the printer that will be used for Check-in
- 4. Select "Properties".



ZDesigner GK4200	Proper	ties		
Stocks Language	Barco	de Fonts	Command For	hts About
General Sharing	Ports	Advanced	Security	Printer Settings
Check-Ih F	Printer			
Location:				
Comment:				
Model: ZDesigner	GK420d	Paper ava	ilable:	
Double-sided: No		User defin	ned	~
Staple: Unknown				
Scapie: Unknown				
Maximum resolution: 2	203 doi			~
indamain resolution. 2	.00 001			
	Printing	Preferences	Print T	est Page

- 5. The Printer properties will open.
- 6. Change the name of the printer to "Check-In Printer". This must be exact.



💩 ZDesigne	r GK420d Properties
Stocks	Language Barcode Fonts Command Fonts About
General	Sharing Ports Advanced Security Printer Settings
Vi er th pr	ou can share this printer with other users on your network. To able sharing for this printer, click Share this printer. If you share is printer, Windows Firewall will be configured to allow this inter to be shared with other computers on the network.
🔿 Don	ot share this printer
💿 Shar	e this printer
Share n	ame: Check-In Printer
Driver: If this Wind users the sh	printer is shared with users running different versions of ows, you may want to install additional drivers, so that the do not have to find the print driver when they connect to ared printer.
	Additional Drivers
	OK Cancel Apply Help

- 7. Click the Sharing tab.
- 8. Click Share this printer
- 9. Set the Share name as Check-In Printer
- 10. Click OK.



11. The printer will show as Check-In Printer.



ſ	What type of check-in t	would you like?	Next
	Assisted Check-in	Self Check-in	
	Entire Household	Individual Only	After scanning the barcode, return the individual only.
	No Item Tags	Allow Item Tags	User can print item tags.
	No Extra Name Tag	Always Print Extra	Do not print an extra name tag.
Tra Ch	iining Database urch	MENU	Men's Prayer Breakfast

- 12. Launch Check-in to set the default printer.
- 13. Click Menu.

	Exit Application Back to Search
CActivity Setup	Printer
Set Default Activity	Turn Printer Functions Off
Change Activity	Set Default Printer
Application Setup	Print Test Tag
Self or Assisted Check-in	Turn Cutter On
Authenticate Church	
Training Detabase	
Church	Tue, 7:32 AM

14. Click Set Default Printer.





	Choose a supported Zebra printer : LPT1/Parallel Port (don'tuse a print driv	rer)		
	Check-In Printer			
	Check-In Printer (from WL00235065)			
	Microsoft XPS Document Writer			
	Microsoft XPS Document Writer (from WL00	235065)		
	<b>_</b>			
		Continue	Cancel	
Training Database Church				

- 15. Select the Check-In Printer.
- 16. Click Continue.



17. Download the correct Script to the computer desktop to reset the printer.





18. Right-click and select Extract All.



- 19. The Extraction Wizard will begin.
- 20. Click Next.



Extraction Wizard	
Select a Destination Files inside the ZIP choose.	archive will be extracted to the location you
	Select a folder to extract files to. Files will be extracted to this directory: Ints and Settings\XPMUser\Desktop\ResetGodex Browse Password Extracting
	< Back Next > Cancel

21. The directory can be changed but keeping the default will install it on the Desktop.22. Click Next.

Extraction Wizard	
Extraction Complete Files have been su	ccessfully extracted from the ZIP archive.
	Files have been successfully extracted to the following directory: C:\Documents and Settings\XPMUs\ResetGodex To see your extracted files, check the box below: Show extracted files Press finish to continue.
	K Back Finish Cancel

- 23. On the last screen insure that "Show extracted files" is checked.
- 24. Click Finish.



눧 ResetGodex		
File Edit View Favorites Tools H	Help	
🕞 Back 🔹 🕥 👻 🏂 🔎 Sear	rch 🎼 Folders 🛄 🗸	
Address 🛅 C:\Documents and Settings\XP	MUser\Desktop\ResetGodex	💙 🄁 Go
File and Folder Tasks     Image: Constraint of the state       Image: Constraint of the state     Publish this folder to the web       Image: Constraint of the state     Image: Constraint of the state       Image: Constraint of the state     Image: Constraint of the state       Image: Constraint of the state     Image: Constraint of the state       Image: Constraint of the state     Image: Constraint of the state       Image: Constraint of the state     Image: Constraint of the state       Image: Constraint of the state     Image: Constraint of the state       Image: Constraint of the state     Image: Constraint of the state       Image: Constraint of the state     Image: Constraint of the state       Image: Constraint of the state     Image: Constraint of the state	Instructions Text Document 2 KB	
Other Places		
<ul> <li>Desktop</li> <li>My Documents</li> <li>Shared Documents</li> <li>My Computer</li> <li>My Network Places</li> </ul>		
Details		

25. Enter the ResetGodex or ResetZebra folder.



26. Double-click ResetZebra or ResetGodex.





- 27. The Script will run and the printer will feed several labels.
- 28. The DOS window will show "Printer Check-in Printer was successfully Rest to F1 Defaults".



### **Windows 7 Printer Alignment**



- 1. Click the Start button.
- 2. Click Devices and Printers.





- 3. Right-click on the on the printer that will be used for Check-in
- 4. Select "Printer properties".

🚽 ZDesigner	GK420d Pro	perties	in the second	-	2		×
Printer Setting	gs Stocks	Languag	e B	arcode	Fonts	Command Fonts	About
General	Sharing	Ports	Advar	nced	Color	Management	Security
	Check	-In Printer					
Location:							
Comment							
Model: Features Color: N	ZDesign	ner GK420d		Paper a	vailabl	e:	
Double-	sided: No			User d	efined		*
Speed: L	Jnknown						
Maximu	m resolution	n: 203 dpi					-
		P	referer	nces		Print Test P	age
	(	ОК		Cancel		Apply	Help



- 5. The Printer properties will open.
- 6. Change the name of the printer to "Check-In Printer". This must be exact.

TDesigner GK420-D Properties
Printer Settings Stocks Language Barcode Fonts Command Fonts About
General Sharing Ports Advanced Color Management Security
You can share this printer with other users on your network. The printer will not be available when the computer is sleeping or turned off.
Share this printer
Share name: Check-In Printer
Render print jobs on client computers
Drivers If this printer is shared with users running different versions of
Windows, you may want to install additional drivers, so that the users do not have to find the print driver when they connect to the shared printer.
Additional Drivers
OK Cancel Apply Help

- 7. Click the Sharing tab.
- 8. Click Share this printer
- 9. Set the Share name as Check-In Printer
- 10. Click OK.



11. The printer will show as Check-In Printer.



ſ	What type of check-in t	would you like?	Next
	Assisted Check-in	Self Check-in	
	Entire Household	Individual Only	After scanning the barcode, return the individual only.
	No Item Tags	Allow Item Tags	User can print item tags.
	No Extra Name Tag	Always Print Extra	Do not print an extra name tag.
Tra Ch	iining Database urch	MENU	Men's Prayer Breakfast

- 29. Launch Check-in to set the default printer.
- 30. Click Menu.

	Exit Application Back to Search
Activity Setup	 
Set Default Activity	Turn Printer Functions Off
Change Activity	Set Default Printer
Application Setup	Print Test Tag
Self or Assisted Check-in	Turn Cutter On
Authenticate Church	
aining Database hurch	Tue, 7:32 At

31. Click Set Default Printer.





	Choose a supported Zebra printer : LPT1/Parallel Port (don'tuse a print driv	rer)				
	Check-In Printer					
	Check-In Printer (from \U00235065)					
	MicrosoftXPS Document Writer					
	MicrosoftXPS Document Writer (from WL00235065)					
	<b>_</b>					
		Continue	Cancel			
Training Database Church						

- 32. Select the Check-In Printer.
- 33. Click Continue.



34. Download the correct Script to the computer desktop to reset the printer.



1		
Res	<b>Open</b> Open with jEdit	
	Extract All Scan with FortiClient AntiVirus	
Res	Submit for analysis Open with	•
	Share with Restore previous versions	•
	Send to	•
	Cut Copy	
	Create shortcut Delete Rename	
	Properties	

35. Right-click and select Extract All.

Extract Compressed (Zipped) Folders	
Select a Destination and Extract Files	
C:\Users\semory\Desktop\ResetZebra	Browse
☑ Show extracted files when complete	
	Extract Cancel

- 36. The Extraction Wizard will begin.
- 37. The directory can be changed but keeping the default will install it on the Desktop.
- 38. Insure that "Show extracted files when complete" is checked.
- 39. Click Extract.



							- 0	x
O v ↓ ResetZebra →				•	Search ResetZebra			٩
File Edit View Tools Help								
Organize 👻 Include in library 👻 Sh	nare with	h 🔻 Burn	New folder					0
☆ Favorites	^ N	lame	*	Date modified	Туре	Size		
Desktop		🔓 ResetZebra		9/6/2011 4:19 PM	A File folder			
bownloads		Instructions		7/6/2011 1:25 PM	A Text Document		2 KB	
Dropbox								
incent needs								
📜 Libraries								
Documents								
	=							
Videos								
La viacos								
🖳 Computer								
🕌 Local Disk (C:)								
fellowshipone.custhelp.com								
👽 Network	-							
2 items								

40. Enter the ResetGodex or ResetZebra folder.



41. Double-click ResetZebra or ResetGodex.





- 42. The Script will run and the printer will feed several labels.
- 43. The DOS window will show "Printer Check-in Printer was successfully Rest to F1 Defaults".